



GENERAL NOTES:

1. UNDERCUT EXISTING PIPE ONLY FOR SADDLE.
2. PREVENT ANY DEBRIS FROM FALLING IN SEWER WHILE CUTTING INTO EXISTING PIPE.
3. JOINT BETWEEN TAPPING SADDLE AND 12" R.C.P. TO BE JUTE AND MINERAL LEAD.
4. SEE STANDARD DETAIL S/5.01 FOR SLAB DETAIL.
5. INSTALL 12" RISER PIPE AT THE MIDPOINT BETWEEN THE EXISTING PIPE'S BELL SPIGOT.
6. 12" RISER PIPE MUST BE PLUMB.
7. OPENING IN SEWER PIPE WALL TO BE CORE DRILLED NO HAND TAPPING.

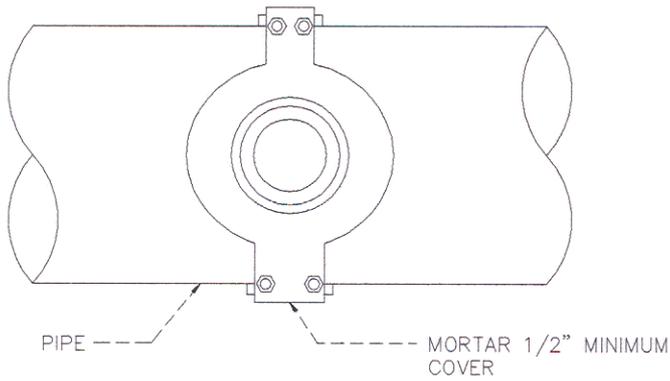

PLAN

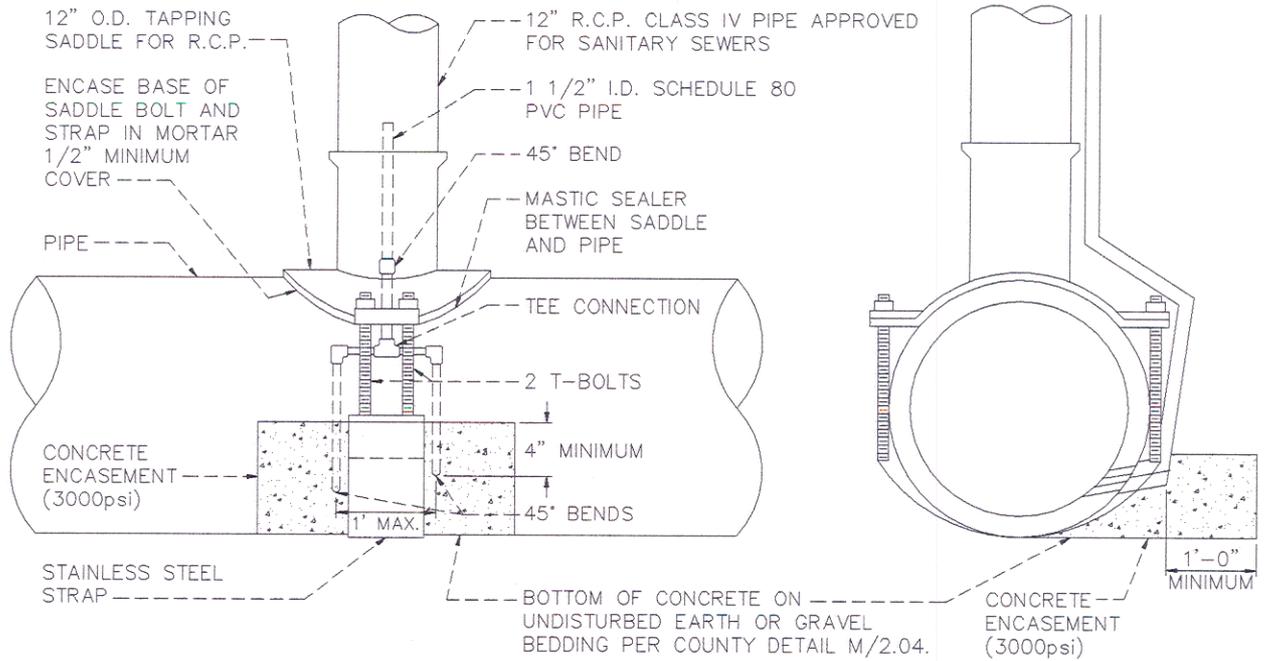

DETAIL OF PIPING

CHARLES COUNTY GOVERNMENT

DEPARTMENT OF PLANNING & GROWTH MANAGEMENT

APPROVED:

[Signature] 6/29/95
 DIRECTOR OF DEVELOPMENT SERVICES DATE

[Signature] 6/29/95
 WATER / SEWER ENGINEER DATE

STANDARD DETAIL
 RISER PIPE
 CONNECTION TO
 EXISTING SEWER FOR
 FLOW GAUGING

REVISIONS:

| |
|--|
| |
| |
| |
| |

S
 5.03